

— Dir	ne				
L	*	W	*	Н	
250	*	127	*	41 (1U)	mm
9.84	*	5	*	1.61 (1U)	inch

Features

- Universal AC input / Full range
- · Built-in active PFC function
- · High efficiency up to 92%
- Forced air cooling by built-in DC fan
- · Output voltage and constant current level programmable
- Built-in remote ON-OFF control / remote sense / auxiliary power / DC OK signal
- Protections: Short circuit / Overload / Over voltage / Over temperature
- · Optional conformal coating
- 5 years warranty

R: Mus (ALC) (ALC)

Certificates

 Safety: UL/EN/IEC 60950-1 EMC: EN 55022 / 55024

Applications

- Factory control or automation apparatus
- Test and measurement instrument
- · Laser related machine
- · Burn-in facility
- RF application

Description

RSP-750 is a 750W single output enclosed type AC/DC power supply. This series operates for 90~264VAC input voltage and offers the models with the DC output mostly demanded from the industry. Each model is cooled by the built-in fan with fan speed control, working for the temperature up to 70°C. Moreover, RSP-750 provides vast design flexibility by equipping various built-in functions such as the output programming, remote ON-OFF control, auxiliary power, etc.


Model Encoding / Order Information





SPECIFICATION


		RSP-750-5	RSP-750-12	RSP-750-15	RSP-750-24	RSP-750-27	RSP-750-48			
	DC VOLTAGE	5V	12V	15V	24V	27V	48V			
	RATED CURRENT	100A	62.5A	50A	31.3A	27.8A	15.7A			
	CURRENT RANGE	0 ~ 100A	0 ~ 62.5A	0 ~ 50A	0 ~ 31.3A	0 ~ 27.8A	0 ~ 15.7A			
	RATED POWER	500W	750W	750W	751.2W	750.6W	753.6W			
	RIPPLE & NOISE (max.) Note.2	150mVp-p	150mVp-p	150mVp-p	150mVp-p	150mVp-p	150mVp-p			
OUTPUT	VOLTAGE ADJ. RANGE	4.75 ~ 5.5V	10 ~ 13.5V	13.5 ~ 16.5V	20 ~ 26.4V	24 ~ 30V	43 ~ 55V			
0011 01	VOLTAGE TOLERANCE Note.3		±1.0%	±1.0%	±1.0%	±1.0%	±1.0%			
	LINE REGULATION	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%			
	LOAD REGULATION	±2.0%	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%			
	SETUP, RISE TIME	1000ms, 50ms at full load								
	HOLD UP TIME (Typ.)	16ms/230VAC	16ms/115VAC at fu	ıll load						
	VOLTAGE RANGE Note.4	90 ~ 264VAC 127 ~ 370VDC								
	FREQUENCY RANGE	47 ~ 63Hz								
	POWER FACTOR (Typ.)	0.97/230VAC 0.98/115VAC at full load								
INPUT	EFFICIENCY (Typ.)	82%	87%	89%	90.5%	90.5%	92%			
	AC CURRENT (Typ.)	5V : 5.6A/115VAC	2.8A/230VAC	12V~48V : 8.2A/1	15VAC 3.9A/230VA	С	'			
	INRUSH CURRENT (Typ.)	25A/115VAC	40A/230VAC							
	LEAKAGE CURRENT	<2.0mA / 240VAC								
		105 ~ 125% rated								
	OVERLOAD			na rossyara sytomati	aally after fault aandition	io romavad				
				-	cally after fault condition	1	50.0.00.01/			
PROTECTION	OVER VOLTAGE (OVP)	5.75 ~ 6.75V	13.8 ~ 16.8V	17 ~ 20.5V	27.6 ~ 32.4V	31 ~ 36.5V	56.6 ~ 66.2V			
		Protection type: Shut down o/p voltage, re-power on to recover								
	OVER TEMPERATURE		0 ,	atically after temperat						
	OUTPUT VOLTAGE PROGRAMMABLE(PV)									
	CONSTANT CURRENT LEVEL PROGRAMMABLE(PC)	Adjustment of co	nstant current level i	s allowable to 40 ~ 11	0% of rated current. Ple	ase refer to the Fu	nction Manual.			
FUNCTION	AUXILIARY POWER	12V @ 0.1A; toler	ance: ±10%							
	REMOTE ON-OFF CONTROL	Power on : short between Remote ON-OFF(pin13) & 12V-AUX(pin14) on CN50 Power off : open between Remote ON-OFF(pin13) & 12-AUX(pin14) on CN50								
	DC OK SIGNAL	The TTL signal ou	t. power supply turn o	n = 0 ~ 1V : power sui	oply turn off = 3.3 ~ 5.6V					
	WORKING TEMP.	The TTL signal out, power supply turn on = $0 \sim 1V$; power supply turn off = $3.3 \sim 5.6V$ - $30 \sim +70^{\circ}C$ (Refer to "Derating Curve")								
	WORKING HUMIDITY	20 ~ 90% RH non-condensing								
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH non-condensing								
	TEMP. COEFFICIENT									
		±0.03%/°C (0~50°C)								
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes UL60950-1, TUV EN60950-1, EAC TP TC 004 approved								
	SAFETY STANDARDS									
	WITHSTAND VOLTAGE		I/P-FG:2KVAC O/F							
	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C/70% RH								
		Parameter		Standard		Test Level / Note				
		Conducted			R32) / EN55011 (CISPR11	·				
	EMC EMISSION	Radiated		EN55032 (CISPF	R32) / EN55011 (CISPR11) Class B				
		Harmonic Curren	t	EN61000-3-2						
SAFETY &	3.	Voltage Flicker		EN61000-3-3						
EMC		EN55024, EN612	204-3, EN61000-6-2							
(Note 7)		Parameter		Standard		Test Level / Not	е			
,		ESD		EN61000-4-2			; Level 2, 4KV contact			
		Radiated		EN61000-4-3		Level 3	, LOVOI L, TITY CONTACT			
	EMC IMMUNITY	EFT / Burst		EN61000-4-4		Level 3				
		Surge		EN61000-4-5		· ·	Earth ; Level 3, 2KV/Line-Li			
		Conducted		EN61000-4-6		Level 3				
		Magnetic Field		EN61000-4-8		Level 4				
		Voltage Dips and	Interruptions	EN61000-4-11		>95% dip 0.5 per >95% interruption	riods, 30% dip 25 perio ns 250 periods			
071155	MTBF	336.9K hrs min. Telcordia SR-332 (Bellcore) ; 109.1K hrs min. MIL-HDBK-217F (25℃)								
OTHERS	DIMENSION	250*127*41mm (L*W*H)								
	PACKING	1.64Kg; 6pcs/10.8Kg/1.1CUFT								
NOTE	Ripple & noise are measure Tolerance: includes set up Derating may be needed ur There is high possibility to t load or no load condition. It Strongly recommended that The power supply is consid a 720mm*360mm metal pla perform these EMC tests, p	OT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. re measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor. des set up tolerance, line regulation and load regulation. needed under low input voltages. Please check the derating curve for more details. ssibility to trigger the floating over voltage protection when PV voltage is trimmed from a high voltage level to a lower voltage level at light ondition. It is suggested that turn off the power supply and set PV voltage to the lowest level, then adjust output voltage to a desired value. tended that external output capacitance should not exceed 5000uF. (Only for RSP-750-5) y is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on m metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to WC tests, please refer to "EMI testing of component power supplies." (as available on http://www.meanwell.com) perature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft).								

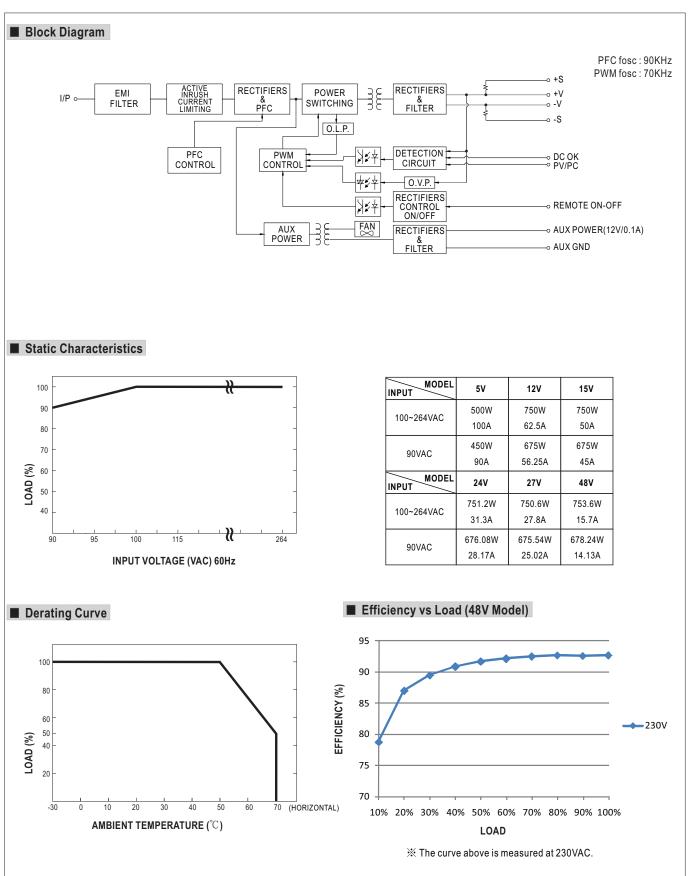

■ Function Manual

1.Remote Sense

The remote sensing compensates voltage drop on the load wiring up to 0.5V.

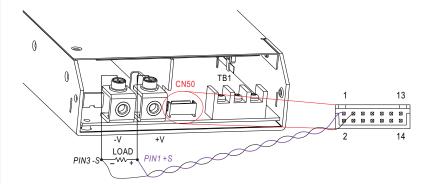

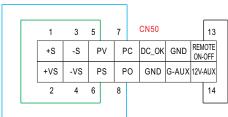
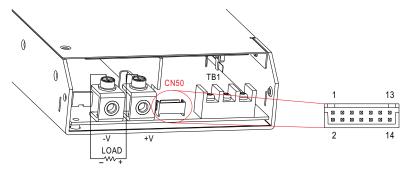


Fig 1.1

- © The +S signal should be connected to the positive terminal of the load whereas -S signal to the negative terminal.
- By factory default, on CN50, Remote ON-OFF (pin13) and 12V-AUX (pin14), PV(pin5) and PS (pin6), and PC (pin7) and PO (pin8, respectively, are shorted when shipped. The power supply will have no output if the shorting connector is not assembled unless certain functin needs to be activated.

2.Remote ON-OFF

* The power supply can be turned ON/OFF by using the "Remote ON-OFF" function.



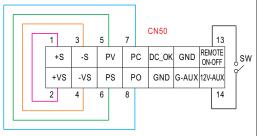



Fig 2.1

Between Remote ON-OFF(pin13) and 12V-AUX(pin14)	Power Supply Status
SW close (Short)	ON
SW open (Open)	OFF

supply should be connected.

3. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)

EXTERNAL VOLTAGE.

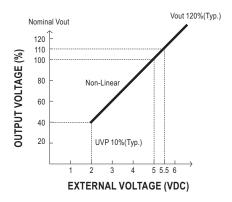

External Voltage (2~5.5VDC) CN50 3 5 13 1 7 REMOTE GND +S -S PV PC DC_OK +VS -VS PS РО GND G-AUX 12V-AUX 2 14 4 8


◎ If EXTERNAL VOLTAGE (VDC) < 0.5V, the power supply may enter under voltage protection; it needs to be restarted to work.

Fig 3.1

X Caution: By factory default, the Output Voltage Programming is not activated, and PV (pin5) and PS(pin6) are shorted by connector. Whenever this function is not needed to activate, as assumed in other sections' diagrams, please keep PV (pin5) and PS(pin6) shorted; other wise, the power supply will have no output.

4. Constant Current Level Programming (or, PC / remote current programming / dynamic current trim)

※ The constant current level can be trimmed to 40~110% of the rated current by applying EXTERNAL VOLTAGE.

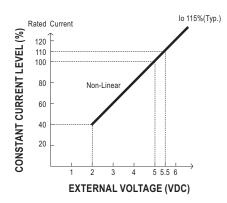


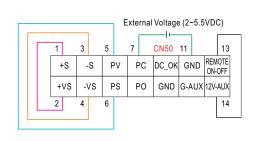


Fig 4.1


X Caution: By factory default, the Output Current Programming is not activated, and PC(pin7) and PO(pin8) are shorted by connector. Whenever this function is not needed to activate, as assumed in other sections' diagrams, please keep PC(pin7) and PO(pin8) shorted; otherwise, the power supply will have no output.

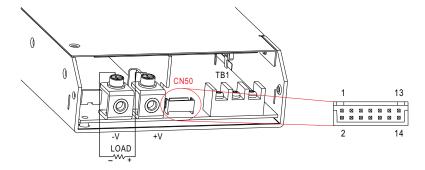

5.DC_OK signal

- % "DC_OK" is an open collector signal. It indicates the output status of the power supply. It can operate in two ways: One is sinking current from external TTL signal; the other is sending out a TTL voltage signal.
- © Sinking current from external TTL signal: The maximum sink current is 10mA and the maximum external voltage is 5.6V.
- O Sending out TTL voltage signal :

Between DC- OK(pin9) and GND(pin10&11)	Output Status
0 ~ 1V	Power supply ON
3.3 ~ 5.6V	Power supply OFF

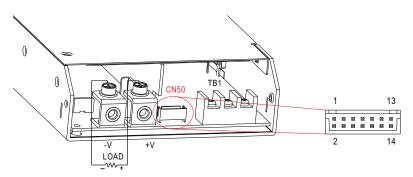


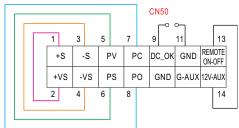


Fig 5.1

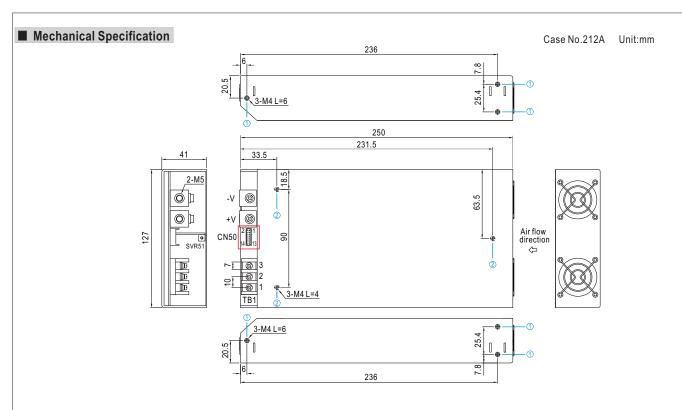

Mounting Instruction

Hole No. Recommended Screw Size		MAX. Penetration Depth L	Recommended mounting torque	
1	M4	6mm	7~11Kgf-cm	
2	M4	4mm	7~11Kgf-cm	

Chassis of RSP-750 Mounting Surface Mounting Screw



Mating Housing	HRS DF11-14DS or equivalent
Terminal	HRS DF11-**SC or equivalent

Pin No.	Function	Description	
1	+S	Positive sensing for remote sense.	
2	+VS	+V Signal. The +VS should be connected to the +S to reduce the noise when "output voltage programming" function is in use	
3	-S	Negative sensing for remote sense.	
4	-VS	-V Signal. The -VS should be connected to the -S to reduce the noise when "output voltage programming" function is in use.	
5	PV	Connect to external DC voltage source for output voltage programming, referenced to pin 10,11 (GND).	
6	PS	Reference pin regarding output voltage programming. Please refer to the Function Manual.	
7	PC	Connect to external DC voltage source for output current programming.	
8	PO	teference pin regarding output current programming. Please refer to the Function Manual.	
9	DC_OK	Open collector signal, referenced to pin10,11(GND). Low when PSU turns on. The maximum sink current is 10mA and the maximum external voltage is 5.6V.	
10,11	GND	These pins connect to the negative terminal (-V). Return for DC_OK Signal output.	
12	G-AUX	Auxiliary voltage output ground. The signal return is isolated from the output terminals (+V $\&$ -V).	
13		Turns the output on and off by electrical or dry contact between pin 13 (ON/OFF) and pin 14 (12V-AUX). Short: Power ON, Open: Power OFF.	
14	12V-AUX	Auxiliary voltage output, 10.8~13.2V, referenced to pin 12(G-AUX). The maximum load current is 0.1A. This output is not controlled by the "remote ON/OFF control".	

$\frak{\mathrm{MC}}$ Input Terminal Pin No. Assignment

Pin No.	Assignment	Diag	ram	Maximum mounting torque
1	AC/N		0-0-0-0	
2	AC/L	888		18Kgf-cm
3	FG ±			

※DC Output Terminal Pin No. Assignment

Assignment	Diagram	Maximum mounting torque
+V, -V		10Kgf-cm

■ Installation Manual

Please refer to: http://www.meanwell.com/manual.html